



USER INFORMATION

pursuant to art. 26 of Italian Legislative Decree no. 49 of 2 April 2014 "Implementation of Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)", pertaining to reduced use of hazardous substances in electrical and electronic equipment, as well as to waste disposal".

The symbol of the crossed-out wheeled bin on the equipment or on its packaging indicates that the product must be disposed of separately from other waste at the end of its service life.

The user must therefore take the dismissed equipment to suitable separate collection centres for electrical and electronic waste, or return it to the dealer in case they purchase a new device of equivalent type, at a one-to-one-ratio.

Suitable segregated collection of the equipment for subsequent recycling, treatment or environmentally-friendly disposal helps prevent damage to the environment and to human health, and encourages the re-use and/or recycling of the materials that make up the equipment.


Abusive disposal of the product by the user shall result in the application of administrative fines in accordance with the laws in force.

POLY POOL s.p.a.
Via Sottocorna 21/B - 24020 Parre (Italy)
Tel. 035703244 r.a. - Fax 035702716
<http://www.ardes.it> - e-mail: info@ardes.it

DESCRIPTION OF THE APPLIANCE

1 - Heating panel
2 - Control switch

3 - Plug connector
4 - Socket connector

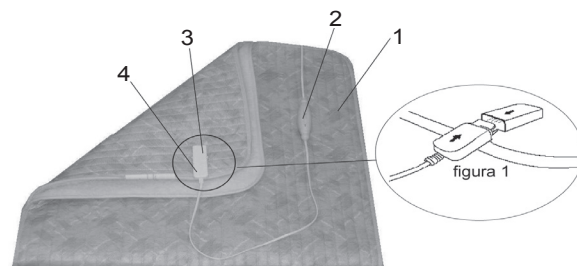

INSTRUCTIONS FOR USE

Read the instructions carefully.

Lay the underblanket between the sheet and the mattress.

Insert the plug connector into the socket connector of the panel using as reference the arrows direction (See fig. 1).

Do not place the control under the pillow or under the underblanket itself when it is switched on.

Switch on the underblanket about an hour before going to bed and select position 2 on the control.

If you wish to hold the right warm during the night, select position 1 on the control.

The control at the end of the cable carries a switch with positions: 0 - 1 - 2. The underblanket is off when the switch is in 0 position. Position 1: lowest temperature. Position 2: highest temperature.

MAINTENANCE

The underblanket does not require special maintenance. Just check it, the flex cable and the control regularly for any signs of wear or damage.

If you notice any such signs or if the underblanket has been misused, take it to a service centre for an inspection before using it again.

Do not dry-clean or use chemical solvents.

They might damage the underblanket and make it unsafe to use.

Before washing or cleaning it in any way, remove the detachable control by pulling its plug out of the connector on the underblanket.

NEVER IMMERSE THE CONTROL IN WATER.

If necessary, you can clean the control using a soft, slightly damp cloth. Wash the underblanket by hand in warm water, not above 40C max and do not immerse the connector in water.


Do not squeeze or wring out.

Let it drip dry without folding it. Do not iron it. Do not use when wet.

When the appliance is not utilized, keep it in its original pack, in a dry and clean place.

Before folding the appliance for disposal, make sure that it has been cooled off.

When the appliance has been disposed you must avoid to produce folds, overlapping some weights on it.

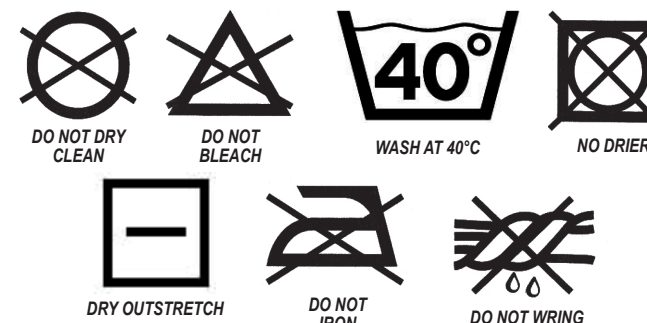

INSTRUCTIONS FOR USE - UNDERBLANKET

This appliance may be used by children 8 years of age and older and people with reduced physical, sensory or mental capacities or with a lack of experience and knowledge if they are adequately supervised or have been instructed on the safe use of the appliance and are aware of the related dangers.

Children must not play with the appliance. Cleaning and maintenance must not be performed by children unless they are under supervision. Cleaning and maintenance operations must not be performed by children without supervision.

**ATTENTION
READ THIS BOOKLET
CAREFULLY.
IT CONTAINS IMPORTANT
INSTRUCTIONS FOR A SAFE
INSTALLATION, USE AND
MAINTENANCE.
IMPORTANT INSTRUCTIONS TO
BE KEPT FOR FUTURE
REFERENCE.**

WARNINGS

Keep handy the guarantee, receipt of payment and these instructions for future use and reference.

After removing the packaging, check the appliance for any signs of damage. In case of visible damage, do not use it and contact a qualified technician.

Keep all parts of the packaging out of the reach of children. The appliance is not a toy: it is an electrical device and must be treated with the necessary caution.

This appliance must not be used by individuals (including children) with diminished physical, sensory or mental abilities or who lack the experience or knowledge on how to operate it unless they are supervised or have been instructed on the use of the appliance by someone who is responsible for their safety.

The appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

Children must be supervised to make sure that they do not play with the appliance.

Not to be used by very young children (0-3 years).

Before connecting the appliance, make sure that the power supply voltage matches the indication on the data plate.

If the plug and socket are not compatible, have the socket replaced with a suitable type by skilled persons. Do not use adapters or extension cables which do not meet current safety standards or that exceed the current carrying capacity limits.

Disconnect the appliance from the power supply socket whenever it is not in use.

Do not tug on the power cable or on the appliance itself to remove the plug from the socket.

The power cable should be extended to its full length to avoid overheating.

In case of a breakdown or malfunctioning of the appliance, disconnect it at once. Do not attempt to repair it.

If the power cable gets damaged, have it replaced only at a qualified technician.

The appliance has been designed and manufactured to operate as an underblanket. Any other use is considered inappropriate and dangerous.

Use the underblanket only together with the control supplied with it and written on the washing-rating label.

Do not use the appliance out of doors.

For safety reasons, the appliance and the swicht should never be opened.

Not to be used by hesples people or very young children (0-3 years).

Not to use on an adjustable bed: in contrary case, verify that the underblanket and the cable cannot be caught or blocked, as for example in the hinges.

Do not use it folded up.

Do not use it when it is wrinkled.

Do not tuck in the wired area.

Do not use pins.

Do not use it when wet.

Do not dry-clean.

Do not put inside a tumble-drier.

Use only as an underblanket, not as a blanket.

Use only on top of a mattress, not on hard surfaces without a mattress, on a net, slats or the floor.

This appliance is not meant for hospital use.



READ THE
INSTRUCTIONS



NOT TO BE
USED 0-3 YEARS



DO NOT USE IT WHEN
IT IS WRINKLED.



DO NOT USE
PINS

The technical data are indicated on the label sewn on the appliance.

This product has been manufactured in conformity with current 2014/30/CE and 2014/35/CE.



GUARANTEE

Terms and Conditions

The term of this guarantee is 36 (thirtysix) months from the date of purchase.

This guarantee applies only if it has been duly filled in and is submitted with the receipt showing the date of purchase.

The guarantee covers the replacement or repair of parts making up the appliance which were faulty at source due to manufacturing faults.

The appliance must be taken to one of our service centres together with this certificate of guarantee and the legal receipt.

After the guarantee has expired, the appliance will be repaired against payment.

The manufacturer declines any responsibility for damage to persons, animals or property due to misuse of the appliance and failure to observe the directions contained in the instructions.

Limits

All rights under this guarantee and any responsibility on our part will be voided if the appliance has been:

- mishandled by unauthorized persons
- improperly used, stored or transported.

The guarantee does not cover damage to the outward appearance or any other that does not prevent regular operation.

If any faults should be found despite the care taken in selecting the materials and in creating the product, or if any information or advice are required, call Ardes.